
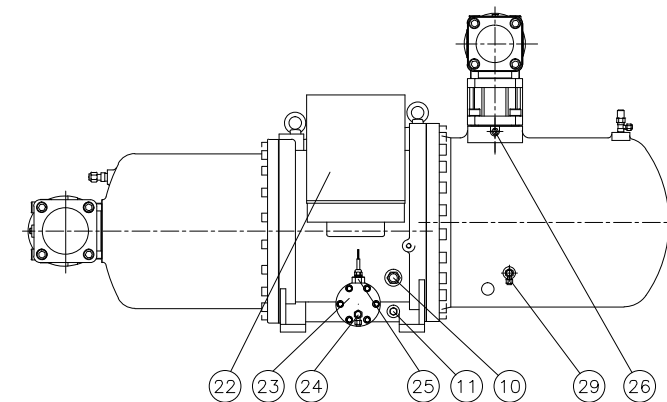
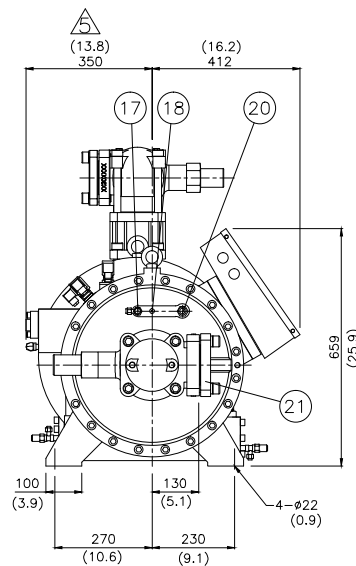


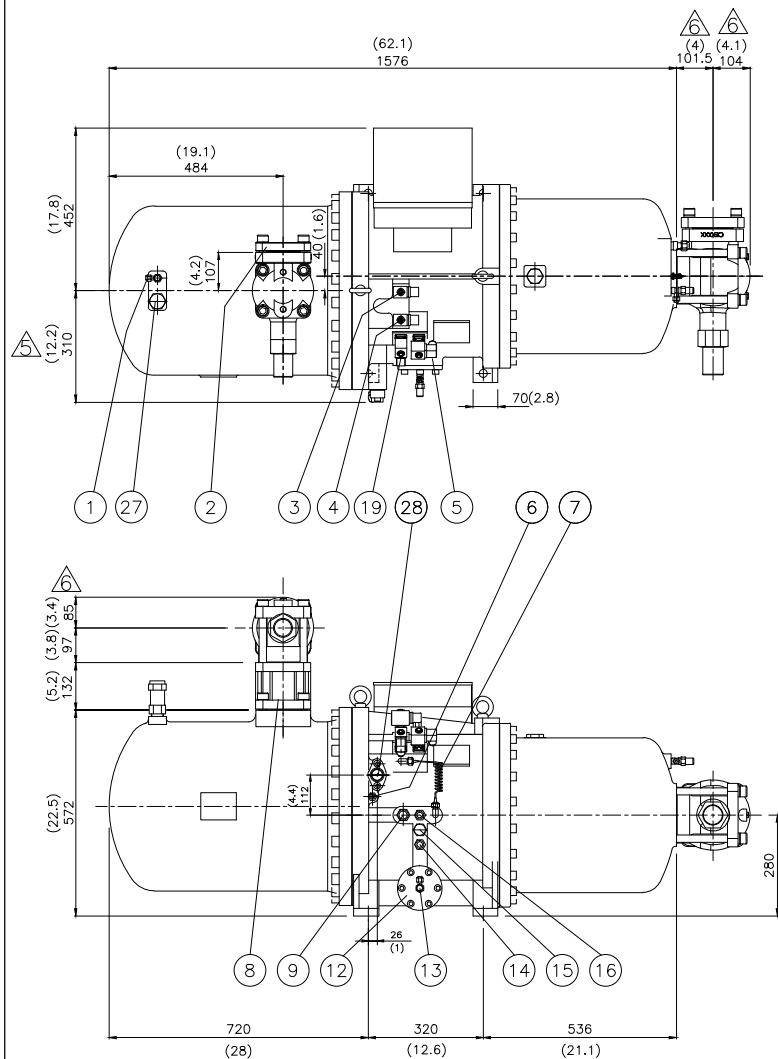

| No. | Name                                           | Note              | No. | Name                       | Note                       |
|-----|------------------------------------------------|-------------------|-----|----------------------------|----------------------------|
| 1   | Angle valve                                    | 1/4"Flare         | 16  | Oil connector(in)          | 5/8"Flare, option          |
| 2   | Discharge flange                               | 3"                | 17  | Angle valve                | 1/4"Flare                  |
| 3   | Solenoid valve                                 | 50%(NC)           | 18  | Refrigerant service valve  | 1/4"Flare                  |
| 4   | Solenoid valve                                 | 75%(NC)           | 19  | Solenoid valve             | Stepless(NC or NO), option |
| 5   | Solenoid valve                                 | 25%(NC)           | 20  | Liquid injection connector | 5/8"Flare, option          |
| 6   | Liquid(oil or refrigerant) injection connector | 3/8"Flare, option | 21  | Suction flange             | 4"                         |
| 7   | Capillary                                      |                   | 22  | Cable box                  | Standard                   |
| 8   | Check valve                                    | 3"                | 23  | Service flange             |                            |
| 9   | Oil flow sight glass                           |                   | 24  | Oil drain valve            | option                     |
| 10  | Oil level sight glass                          |                   | 25  | Oil level switch           | option                     |
| 11  | Oil heater                                     | 150W/300W         | 26  | Discharge temp. sensor     | 110°C                      |
| 12  | Oil filter cartridge                           |                   | 27  | Safety Valve               | 1"NPT,option               |
| 13  | Oil pressure differential switch               | option            | 28  | Economizer connector       | 1 1/8",solder              |
| 14  | Oil connector(out)                             | 5/8"Flare, option | 29  | Over flow port             | option                     |
| 15  | Stop pin                                       | option            |     |                            |                            |

\*All stop valves are optional.

UNIT:  
SI: mm Imperial: (in)

| △6   | 2014.08.21 | Dimension correction                  |
|------|------------|---------------------------------------|
| △5   | 2012.11.06 | Dimension correction                  |
| △4   | 2012.04.19 | Delete 1.Connector 2.Oil temp. sensor |
| Item | Date       | Modification                          |

|       |                    |      |    |
|-------|--------------------|------|----|
| Model | RC2-550B           |      |    |
| Name  | Compressor outline |      |    |
|       |                    | Ver. | 06 |